




## Twilite 9™ Architectural Preset Lighting Control System

### System Overview

The Twilite 9 series preset lighting control system is designed to be used in a variety of applications, from single conference room control to multi-scene ballroom lighting.

Easy to program and operate, Twilite control faceplates blend with current quality architectural trends and add low profile lighting control to any room.

The Twilite 9 series offers extensive preset lighting features at cost-effective pricing.

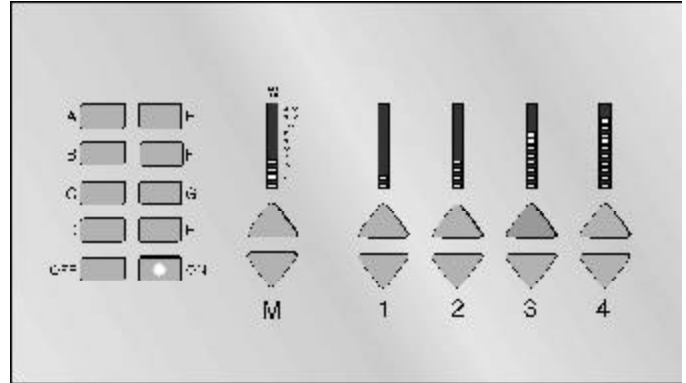

### Operating Instructions

#### To Turn Master Station On:

Select preset button (A thru H) or ON. Button will blink during transition.

Note: ON restores the previous condition.

#### To Turn Master Station Off:

Press OFF. Button will blink and fade to off position.

#### To Raise Channel Intensity:

Press the corresponding UP arrow.

#### To Decrease Channel Intensity:

Press the corresponding DOWN arrow.

#### To Select Non-Dim:

Press and hold ON while selecting the UP arrow of the channel to be set as a non-dim, or DOWN arrow to select the dimmer mode.

#### To Raise All Channel Intensities Simultaneously:

Press the Master (M) UP arrow.

Note: This will proportionally raise the intensities of the channels which have a displayed value.

#### To Lower All Channel Intensities Simultaneously:

Press the Master (M) DOWN arrow.

#### To Make the Preset Brighter:

Press the Master (M) UP arrow.

#### To Make the Preset Darker:

Press the Master (M) DOWN arrow.

#### To Program Fade Time:

To program the time to fade the cue, press and hold ON while selecting the Master UP or DOWN arrow to select the desired fade-rate time from the bargraph.

Note: Selecting the cue will activate the programmed fade time to that cue.

#### To Override Program Fade Rate:

Press preset button twice.

#### To Program a Preset:

Set the channel intensities using UP and DOWN arrows. Once desired levels are obtained, program fade time. To store the setting, press and hold ON for three seconds while selecting the preset to be stored (A thru H).

#### To Select a Preset:

Press the desired preset button. Light intensities will fade from current levels to new levels. The button will flash during the cross-fade.

#### To Lock Out Keyboard:

Press and hold OFF & ON together for a count of three, then select Master (M) UP arrow.

#### To Unlock Keyboard:

Press and hold OFF & ON together for a count of three, then select Master (M) DOWN arrow.