# Share your Hemisphere + At Full creations with us. @blizzardlites /blizzardlighting Lighting's 2-Year Limited Warranty.



## Important Safety Information

This Fixture Contains A Lithium-Ion Battery

Lithium-lon batteries are used for many things, such as powering LED lighting equipment, and they are very safe. It is important, though, to understand their proper use, handling, and storage requirements.

The Li-lon battery type has a very high energy density (A-Hrs. to weight ratio) compared to NiMH, NiCd's, or other batteries. That high energy density equates to an increased risk when using them.

The main risk is fire which can result from improper charging, physical damage, or short circuiting the Li-Ion battery.

Lithium-lon battery fires occur when there is contact between the lithium (inside the battery pack) and oxygen (in the air); it does not need any other source of ignition, or fuel to start.

Because a lithium battery fire burns at an extremely hot temperature (several thousand degrees), its flame can quickly spread to surrounding areas and cause a larger fire and/or fire damage.

Due to this safety issue, it is very important that lithium batteries be used with a high level of caution and attention.

By purchasing this Li-lon battery-powered fixture, the user assumes all risk of operation and agrees to strictly abide by this warning and instructions on the following page.

### YOU MUST READ THESE SAFETY INSTRUCTIONS AND WARNINGS BEFORE USING OR CHARGING YOUR FIXTURES:

- 1. WARNING! TO REDUCE THE RISK OF INJURY AND/OR EQUIPMENT DAMAGE, DO NOT TAMPER WITH THE CHARGING CIRCUITRY IN THIS FIXTURE. The use of other types of chargers may result in personal injury or equipment damage. Under no circumstances attempt to connect the battery pack to any power supplies or other equipment that is not specifically and expressly designated for use with this model battery pack.
- 2. NEVER CHARGE UNATTENDED. When charging Li-lon batteries, you must always remain in constant observation in order to react to potential problems which may occur. Failure to do so may result in fire. Put the battery in a fireproof container, and charge in an isolated area, away from flammable materials. Always have a fire extinguisher ready for emergency use.
- 3. USE THE LITHIUM ION BATTERY PACK ONLY WITH EQUIPMENT SPECIFICALLY AND EXPRESSLY DESIGNATED FOR USE WITH THIS MODEL BATTERY PACK. Use with other equipment may result in fire, electric shock, personal injury, and/or damage to equipment.
- 4. AVOID DANGEROUS CONDITIONS AND ENVIRONMENTS. Do not charge the battery pack in damp or wet conditions. Avoid using the pack in direct exposure to rain or snow. Do not use the battery pack or charger in the presence of explosive gases or flammable materials.
- 5. AVOID USING OR STORING THE BATTERY PACK IN EITHER EXTREME COLD OR EXTREME HOT TEMPERATURES. The battery pack will disable itself under conditions of extreme heat (above 60 °C) and may not function to full performance under conditions of extreme cold (below -20 °C). Storage at elevated temperatures (above 25 °C) will shorten the life of the battery pack.
- 6. DO NOT BURN OR INCINERATE BATTERY PACKS. Battery packs may explode causing personal injury, fire, and/or damage. Fumes resulting from burning of battery packs may be toxic.
- 7. DO NOT DROP, CRUSH, IMPACT, OR MECHANICALLY ABUSE BATTERY PACKS. Cease use of fixtures that have suffered a sharp impact, been dropped, run over, or damaged in any other way. Such impacts may cause internal damage that is not externally visible and that, over time, may cause short circuits, battery cell leakage, or other events that may lead to fire, personal injury, and or equipment damage.
- 8. DO NOT DISASSEMBLE BATTERY PACK. There are no user serviceable parts within battery packs. Disassembly may result in short circuiting or other damage that may cause fire, personal injury, and/or other damage.
- 9. AVOID CONTACT WITH BATTERY CHEMICALS. If a battery pack leaks battery chemicals, avoid any contact with skin, eyes, or mouth. In the event of contact with skin, wash immediately with soap and water and rinse with vinegar. For eye contact, begin flushing with clean water, immediately call for medical help, and continue flushing for 20 minutes or until medical help arrives.
- 10. STORE IN A COOL, DRY PLACE. Avoid leaving the fixture in direct sunlight, vehicle cabs, compartments, or unventilated storage buildings during hot summer conditions. Under extreme temperature conditions damage may occur. Elevated temperatures in general shorten the life of your battery pack.

**Quick Start** 

# The sincerest thanks from all of us at Blizzard Lighting.

The wireless capability of Hemisphere™ allows connection to both complex networks & the smartphone in your pocket. Download At Full™ & use Wi-Fi to configure & control Hemisphere with optimal performance.

Download the At Full app to get started.














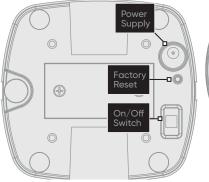

SID: BLIZZARD HEMISPHERE Password: blizzardpro

#### Powering On/Off

Press the action button for 3 seconds to power on, & 5 seconds to power off.

#### **Factory Reset**

Use a small precision screwdriver to gently push & hold down the reset button for 4 seconds & release.

#### AP Mode

After factory reset, press reset button once again.

Long press action button 1-4 seconds to switch modes.

Auto: Runs program cyclically based on speed & strobe.

Built-in Presets: Press button to switch between 15 preset programs.

Static: Press button to cycle through 15 color presets.

Dimmer: Set RGBW values between 00-10. DMX Address: 001-512

DMX Channels: 1 | 2 | 4 | 5 | 6 | 9



with diffuser/dome removed

#### Status LED

Slow Flashing (2 sec) - EZConnect Mode Solid Green - AP Mode - Waiting to connect

Slow Flashing (1 sec) - Connected, strong signal Medium Flashing - Connected, medium signal

Fast Flashing - Connected, weak signal

No Light - Signal lost, try to reconnect

# Set up your fixture with the At Full™ app + EZconnect Mode







ios

bit.ly/2LmJJDE

Android

apple.co/2qlr9op



You are now able to control your Hemisphere & create shows. Have fun!



MORE DMX INFO AT BLIZZARDPRO.COM/HEMISPHERI

#### Channel Mode 1 2 / E 4 0

1	2	4	5	6	9	Attribute	Value	Function
			1	1	1	DIMMER	000-255	0-100%
			2	2	2	LINEAR STROBE	0-10	NO FUNCTION
							11-255	
1			3		3	COLOR WHEEL	000-007	NO FUNCTION
							008-255	COLOR SWATCHES
1			4		4	COLOR PROGRAM	000-015	NO FUNCTION
	1						016-143	CHASE 1-8 (15CH WIDT
							144-255	FADE 1-7 (15CH WIDTH
	2		5		5	COLOR PROGRAM SPEED	000-255	SLOW TO FAST
		1		3	6	RED	000-255	0~100%
		2		4	7	GREEN	000-255	0~100%
		3		5	8	BLUE	000-255	0~100%
		4		6	9	WHITE	000-255	0~100%