



**SPOTMAN**



 **blizzard**

Blizzard Lighting, LLC  
<http://www.blizzardpro.com>  
Waukesha, WI USA  
Copyright (c) 2020

# TABLE OF CONTENTS

<b>1. Getting Started</b>	<b>3</b>
What's In The Box?	3
Getting It Out Of the Box	3
Powering Up!	3
Getting A Hold Of Us	3
Safety Instructions	4
<b>2. Meet SPOTMAN™</b>	<b>5</b>
Main Features	5
DMX Quick Reference (9/11-Channel Modes)	5
SPOTMAN™ Pin-Up Picture	6
The Rear Connections	6
<b>3. Setup</b>	<b>7</b>
Fuse Replacement	7
Connecting A Bunch of SPOTMAN's	7
Data/DMX Cabling	7
Cable Connectors	8
3-Pin??? 5-Pin??? Huh?!?	8
Take It To The Next Level: Setting Up DMX Control	8
Fixture Linking (M/S Mode)	9
Mounting & Rigging	9
<b>4. Operating Adjustments</b>	<b>10</b>
The Control Panel	10
Control Panel Menu Structure	11
Colors and Gobos	11
DMX Mode	12
Starting DMX Address	12
DMX Channel Mode	12
M/S Mode	12
Auto, Sound Active, & Manual Adjustments	12
Auto Mode	12
Sound Active Mode	12
Reverse Pan/Tilt	12
Display Settings	12
<b>5. Appendix</b>	<b>14</b>
Keeping Your SPOTMAN™ As Good As New	14
Returns (Gasp!)	14
Shipping Issues	14
Tech Specs!	15
Dimensional Drawings	15

# 1. GETTING STARTED

## What's In The Box?

- 1 x SPOTMAN™ Fixture
- 1 x IEC Power Cord
- 1 x Mounting Bracket

## Getting It Out Of the Box

Congratulations on purchasing SPOTMAN™, a most excellent choice! Now that you've got your SPOTMAN™, you should carefully unpack the box and check the contents to ensure that all parts are present and in good condition. If anything looks as if it has been damaged in transit, notify the shipper immediately and keep the packing material for inspection. Again, please save the carton and all packing materials. If a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## Powering Up!

All fixtures must be powered directly off a switched circuit and **cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.**

***Warning! All fixtures must be connected to circuits with a suitable Ground (Earthing).***

## Getting A Hold Of Us

**If something goes wrong, please visit [www.blizzardpro.com/support](http://www.blizzardpro.com/support) and open a support ticket. We'll be happy to help, honest.**

**Disclaimer:** The information and specifications contained in this document are subject to change without notice. Blizzard Lighting™ assumes no responsibility or liability for any errors or omissions that may appear in this user manual. Blizzard Lighting™ reserves the right to update the existing document or to create a new document to correct any errors or omissions at any time. You can download the latest version of this document from [www.blizzardpro.com](http://www.blizzardpro.com).

Author:	Date:	Last Edited:	Date:
J. Thomas	10/8/2020	J. Thomas	12/28/2020

## Safety Instructions



Please read these instructions carefully. They include important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future use. If you sell the unit to someone else, be sure that they also receive this User Guide.
- ALWAYS make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20in (50cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ALWAYS disconnect from the power source before servicing or replacing fuse and be sure to replace with same fuse size and type.
- ALWAYS secure fixture using a safety chain. NEVER carry the fixture by its head. Use its carrying handles.
- DO NOT operate at ambient temperatures higher than 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately. NEVER try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- NEVER connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the light source while it is on.

**Caution!** There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please open a support ticket at [www.blizzardpro.com/support](http://www.blizzardpro.com/support).

## 2. MEET SPOTMAN™

### Main Features

- 30W high output white LED light source
- Pan: 540°/ tilt: 270° (8-16 bit resolution)
- 7 gobos + open with shake effects
- 7 color + white color wheel
- Half color beams and rainbow flow effects
- 13° beam angle + manual focus
- Flicker-free, constant current LED driver
- Variable electronic dimmer (0%-100%)
- 1-20Hz strobe effects
- Built-in auto & sound active programs
- Built-in microphone with sensitivity adjustments
- Optional pan/tilt invert function
- 3-pin DMX input/output + IEC power input
- Lightweight composite housing w/mounting bracket

### Control

- Protocol: USITT DMX-512
- DMX channel modes: 9/11-channels
- 4-button control panel with LED display
- Operating modes: DMX512, M/S, auto, sound active


### DMX Quick Reference (9/11-Channel Modes)

9CH	11CH	What It Does
1	1	Pan
	2	Fine Pan
2	3	Tilt
--	4	Fine Tilt
3	5	Color Wheel
4	6	Gobo Wheel
5	7	Strobe (slow <--> fast)
6	8	Dimmer (0% <--> 100%)
7	9	Pan/Tilt Speed (fast <--> slow)
8	10	Auto & Sound Active Modes
9	11	Auto Pan/Tilt Modes + Reset

# SPOTMAN™ Pin-Up Picture



## The Rear Connections

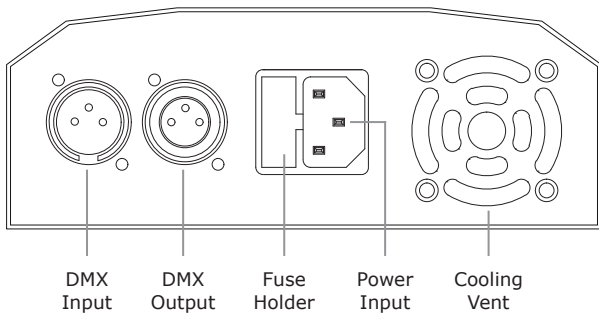


### 3. SETUP



Before replacing a fuse, disconnect the power cord.  
ALWAYS replace with the same type and rating of fuse.

#### Fuse Replacement

With a flat head screwdriver, wedge the fuse holder out of its housing. Remove the damaged fuse from its holder and replace with exact same type fuse.

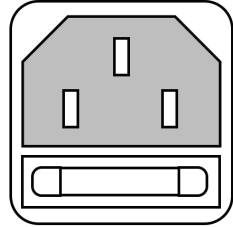

#### Connecting A Bunch of SPOTMAN's

You will need a serial data link to run light shows using a DMX-512 controller or to run shows on two or more fixtures set to sync in master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Fixtures on a serial data link must be daisy chained in one single line. Also, connecting more than 32 fixtures on one serial data link without the use of a DMX optically-isolated splitter may result in deterioration of the digital DMX signal. The maximum recommended cable-run distance is 500 meters (1640 ft). The maximum recommended number of fixtures on a serial data link is 32 fixtures.

#### Data/DMX Cabling

To link fixtures together you'll need data cables. You should use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

For instance, Belden© 9841 meets the specifications for EIA RS-485 applications. Standard microphone cables will "probably" be OK, but note that they cannot transmit DMX data as reliably over long distances. In any event, the cable should have the following characteristics:

*2-conductor twisted pair plus a shield*

*Maximum capacitance between conductors – 30 pF/ft.*


*Maximum capacitance between conductor & shield – 55 pF/ft.*

*Maximum resistance of 20 ohms / 1000 ft.*

*Nominal impedance 100 – 140 ohms*

## Cable Connectors

Cables must have a male XLR connector on one end and a female XLR connector on the other end. (Duh!)

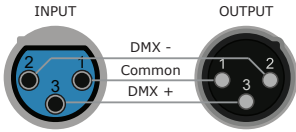

### A Word on Termination:

DMX is a resilient communication protocol, however errors still occasionally occur. Termination reduces signal errors, and therefore best practices include use of a terminator in all circumstances. If you are experiencing problems with erratic fixture behavior, especially over long signal cable runs, a terminator may help improve performance.

### To build your own DMX Terminator:

Obtain a 120-ohm, 1/4-watt resistor, and wire it between pins 2 & 3 of the last fixture. They are also readily available from specialty retailers.

**CAUTION:** Do not allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to verify correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

### 3-Pin??? 5-Pin??? Huh?!?

If you use a controller with a 5-pin DMX output connector, you will need to use a 5-pin to 3-pin adapter. If you'd like to build your own, the chart below details a proper cable conversion:

Conductor	3-Pin Female (Output)	5-Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
Data 1- (Primary Data Link)	Pin 2	Pin 2
Data 1+ (Primary Data Link)	Pin 3	Pin 3
Data 2- (Optional Secondary Data Link)	--	Pin 4 - Do Not Use
Data 2+ (Optional Secondary Data Link)	--	Pin 5 - Do Not Use


## Take It To The Next Level: Setting Up DMX Control

**Step 1:** Connect the male connector of the DMX cable to the female connector (output) on the controller.

**Step 2:** Connect the female connector of the DMX cable to the first fixture's male connector (input).

**Note:** It doesn't matter which fixture address is the first one connected. We recommend connecting the fixtures in terms of their proximity to the controller, rather than connecting the lowest fixture number first, and so on.


**Step 3:** Connect other fixtures in the chain from output to input as above. Place a DMX terminator on the output of the final fixture to ensure best communication.

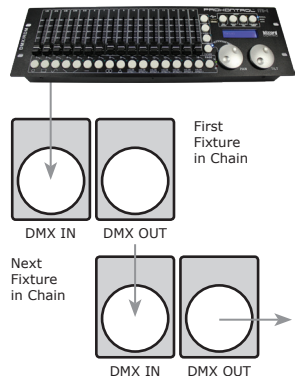



## Fixture Linking (M/S Mode)

1. Connect the male connector side of the DMX cable to the output female connector of the first fixture.

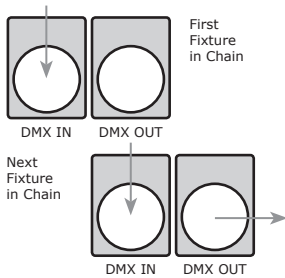

2. Connect the end of the cable coming from the first fixture which will have a female connector to the input connector of the next fixture consisting of a male connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

**A quick note:** Often, the setup for Master-Slave and Standalone operation requires that the first fixture in the chain be initialized for this purpose via either settings in the control panel or DIP-switches. Secondly, the fixtures that follow may also require a slave setting.

Check the "**Operating Adjustments**" section in this manual for complete instructions for this type of setup and configuration.

## Mounting & Rigging

This fixture may be mounted in any SAFE position provided there is enough room for ventilation. The fan or vent pathway must never be obstructed.


**IMPORTANT:** Regardless of the rigging option you choose for your fixtures, always be sure to secure your fixture with a safety cable.

Mount the fixture using a suitable "C" or "O" type clamp. The clamp should be rated to hold at least 10x the fixture's weight to ensure structural stability.

Do not mount to surfaces of unknown strength, and ensure properly rated rigging is used when mounting fixtures overhead.

Overhead mounting requires extensive experience, which includes calculating working load limits, knowledge of the installation material being used, and periodic safety inspections.

If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

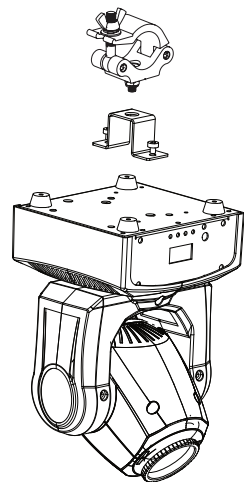

## 4. OPERATING ADJUSTMENTS

### The Control Panel

All the features and different modes possible with SPOTMAN™ are accessed by using the control panel on the rear of the fixture. There are 4 control buttons under to the LED display which allow you to navigate through the various control panel menus.

#### <MENU>

Is used to navigate to the previous higher-level menu item.

#### <UP>


Scrolls through menu items and numbers in ascending order.

#### <DOWN>

Scrolls through menu items and numbers in descending order.

#### <ENTER>

Is used to select and confirm/store the current selection.

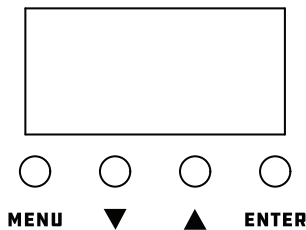



The control panel LED display shows the menu items you select from the menu map on page #11. When a menu function is selected, the display will show immediately the first available option for the selected menu function. To select a menu item, press **<ENTER>**.

Use the **<UP>** and **<DOWN>** buttons to navigate the menu options. Press the **<ENTER>** button to select the menu function currently displayed, or to enable a menu option. To return to the previous option or menu without changing the value, press the **<MENU>** button.

## Control Panel Menu Structure

<b>Addr</b>	A001 - A512	To choose the starting DMX address
<b>CHnd</b>	9CH	9-channel DMX mode
	11CH	11-channel DMX mode
<b>SLNd</b>	NASt	Master
	SL 1	Slave mode 1 (follow)
	SL 2	Slave mode 2 (mirror)
<b>Shnd</b>	Sh 0	Show mode 0
	Sh 1	Show mode 1
	Sh 2	Show mode 2
	Sh 3	Show mode 3
<b>Soud</b>	On	Sound active mode on
	Off	Sound active mode off
<b>SEnS</b>	001 - 100	Mic sensitivity (decrease <--> increase)
<b>bLNd</b>	bLAc	Black out if DMX signal is lost
	HLod	Hold last state if DMX signal is lost
	Soun	Sound active if DMX signal is lost
	Auto	Auto run if DMX signal is lost
<b>LEd</b>	On	Display is always on
	Off	Display turns off after 5s of inactivity
<b>dISP</b>	Yes	Rotate the LED display by 180°
	No	Display normal
<b>rPan</b>	No	Pan normal
	Yes	Pan reverse
<b>rTiL</b>	No	Tilt normal
	Yes	Tilt reverse
<b>rESt</b>	Yes	Reset

## Colors and Gobos

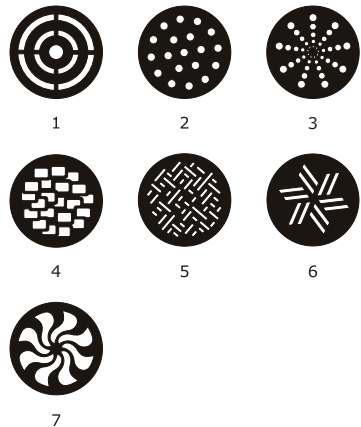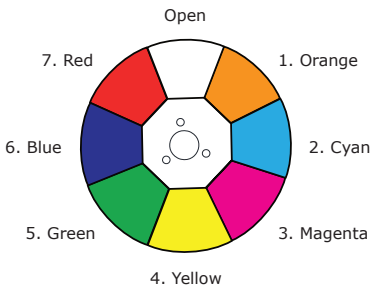

## DMX Mode

*Allows the unit to be controlled by any universal DMX controller.*

### Starting DMX Address

- 1.) Navigate the main menu until you reach **Addr**, and press the **<ENTER>** button. Then use the **<UP/DOWN>** buttons to select a starting DMX address ranging from 1-512, and press **<ENTER>**.

### DMX Channel Mode

- 1.) Navigate the main menu to **CHnd**, and press the **<ENTER>** button. Then use the **<UP/DOWN>** buttons to select **9Ch** or **11Ch**, and press the **<ENTER>** button to confirm.

### M/S Mode

- 1.) Daisy chain the DMX input/output connections of the fixtures.
- 2.) On the 1st fixture, navigate to **SLnd > NAST** and press **<ENTER>**.
- 3.) On the secondary fixtures, navigate to **SLnd**, press **<ENTER>**, then highlight **SL 1** (for same movements at the master fixture) or **SL 2** (mirrored movements of the master fixture), and press **<ENTER>**.
- 4.) Your secondary fixtures will now follow the first fixture.

## Auto, Sound Active, & Manual Adjustments

*Allows a single or daisy chained units to run factory installed programs.*

### Auto Mode

- 1.) Navigate the menu until you reach **Shnd**, and press **<ENTER>**.
- 2.) Use the **<UP/DOWN>** buttons to highlight **Sh 0 - Sh 3**, and press **<ENTER>** button to confirm your choice.

### Sound Active Mode

- 1.) Navigate the menu until you reach **Soud**, and press **<ENTER>**.
- 2.) Use the **<UP/DOWN>** buttons to highlight **On** or **Off**, and press **<ENTER>** button to confirm your choice.
- 3.) To adjust the mic sensitivity, navigate the menu to **SEnS**, and press **<ENTER>**. Then use the **<UP/DOWN>** buttons to select **001 - 100** (decrease <--> increase), and press **<ENTER>**.

### Reverse Pan/Tilt

- 1.) Navigate to **rPan** (reverse pan), or **rTiL** (reverse tilt), No or Yes, and then press the **<ENTER>** button to confirm your choice.

### Display Settings

- 1.) Navigate the menu to **LEd**, press **<ENTER>**, and select **On** (always on) or **Off** (turns off after 5s of inactivity), then press **<ENTER>**.
- 2.) Navigate the menu to **dISP**, press **<ENTER>**, and select **Yes** (normal) or **No** (rotate the display 180°). Press **<ENTER>** to confirm.

## DMX Values In-Depth (9/11-Channel Modes)

9Ch	11Ch	Value	What It Does
1	1	000 <--> 255	Pan
--	2	000 <--> 255	Fine pan
2	3	000 <--> 255	Tilt
--	4	000 <--> 255	Fine tilt
3	5	000 <--> 009 010 <--> 019 020 <--> 029 030 <--> 039 040 <--> 049 050 <--> 059 060 <--> 069 070 <--> 079 080 <--> 089 090 <--> 099 100 <--> 109 110 <--> 119 120 <--> 129 130 <--> 139 140 <--> 255	<b>Color Wheel</b> Open Color 1 Color 2 Color 3 Color 4 Color 5 Color 6 Color 7 Half color 1 Half color 2 Half color 3 Half color 4 Half color 5 Half color 6 Rainbow effect (slow <--> fast)
4	6	000 <--> 007 008 <--> 015 016 <--> 023 024 <--> 031 032 <--> 039 040 <--> 047 048 <--> 055 056 <--> 063 064 <--> 071 072 <--> 079 080 <--> 087 088 <--> 095 096 <--> 103 104 <--> 111 112 <--> 119 120 <--> 127 128 <--> 255	<b>Gobo Wheel</b> Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Open Gobo 1 shake Gobo 2 shake Gobo 3 shake Gobo 4 shake Gobo 5 shake Gobo 6 shake Gobo 7 shake Gobo flow (slow <-> fast)
5	7	000 <--> 009 010 <--> 249 250 <--> 255	<b>Strobe</b> No function Strobe (slow <--> fast) Open
6	8	000 <--> 255	Dimmer
7	9	000 <--> 255	Pan and tilt speed (slow <--> fast)
8	10	000 <--> 059 060 <--> 159 160 <--> 255	<b>Auto and Sound Active Modes</b> No function Auto mode Sound active mode
9	11	000 <--> 009 010 <--> 100 101 <--> 200 201 <--> 249 250 <--> 255	<b>Auto Pan/Tilt + Reset</b> No function Pan auto mode (only pan) Tilt auto mode (only tilt) Pan + Tilt auto mode (pan and tilt) Reset after 5 seconds

# 5. APPENDIX

## Keeping Your SPOTMAN™ As Good As New

The fixture you've received is a rugged, tough piece of pro lighting equipment, and as long as you take care of it, it will take care of you. That said, you'll need to take care of it if you want it to operate as designed. You should keep the fixture clean, especially if you are using it in an environment with a lot of dust, fog, haze, wild animals, wild teenagers or spilled drinks.

Cleaning the optics routinely with a suitable glass cleaner will greatly improve the quality of light output. Keeping the fans free of dust and debris will keep the fixture running cool and prevent damage from overheating.

In transit, keep the fixtures in cases. You wouldn't throw a prized guitar, drumset, or other piece of expensive gear into a gear trailer without a case, and similarly, you shouldn't even think about doing it with your shiny new light fixtures.

Common sense and taking care of your fixtures will be the single biggest thing you can do to keep them running at peak performance and let you worry about designing a great light show, putting on a great concert, or maximizing your client's satisfaction and "wow factor." That's what it's all about, after all!

## Returns (Gasp!)

We've taken a lot of precautions to make sure you never even have to worry about sending a defective unit back, or sending a unit in for service. But, like any complex piece of equipment designed and built by humans, once in a while, something doesn't go as planned. If you find yourself with a fixture that isn't behaving like a good little fixture should, you'll need to obtain a Return Authorization (RA).

Don't worry, this is easy. Just visit [www.blizzardpro.com/support](http://www.blizzardpro.com/support) and open a support ticket, and we'll issue you an RA. Then, you'll need to send the unit to us using a trackable, pre-paid freight method. We suggest using USPS Priority or UPS. Make sure you carefully pack the fixture for transit, and whenever possible, use the original box & packing for shipping.

When returning your fixture for service, be sure to include the following:

- 1.) Your contact information (Name, Address, Phone Number, Email address).
- 2.) The RA# issued to you
- 3.) A brief description of the problem/symptoms.

We will, at our discretion, repair or replace the fixture. Please remember that any shipping damage which occurs in transit to us is the customer's responsibility, so pack it well!


## Shipping Issues

**Damage incurred in shipping is the responsibility of the shipper, and must be reported to the carrier immediately upon receipt of the items. Claims must be made within seven (7) days of receipt.**

## Tech Specs!

<b>Weight &amp; Dimensions</b>	
Width	7.1 inches (180 mm)
Depth	5.8 inches (147 mm)
Height	11.1 inches (281 mm)
Weight	6.5 lbs. (2.95 kg)
<b>Power</b>	
Operating Voltage	100-240VAC, 50-60 Hz
Power Consumption	45W
Fuse	3A, 250V
<b>Light Source</b>	
LED	30W white LED
Beam Angle	13°
Luminance	3,000 lux @ 2m, 1,450 lux @ 3m
<b>Thermal</b>	
Max. Operating Temp.	104 degrees F (40 degrees C) ambient
<b>Movement Range</b>	
Pan	540 degree (8-16 bit resolution)
Tilt	270 degree (8-16 bit resolution)
<b>Control</b>	
Protocol	USITT DMX-512
DMX Channels	9/11-channel
Input/Output	3-pin XLR male/female
Other Operating Modes	DMX512, M/S, Auto, Sound Active
<b>Warranty</b>	
2-year limited warranty, does not cover malfunction caused by damage to LEDs.	

## Dimensional Drawings

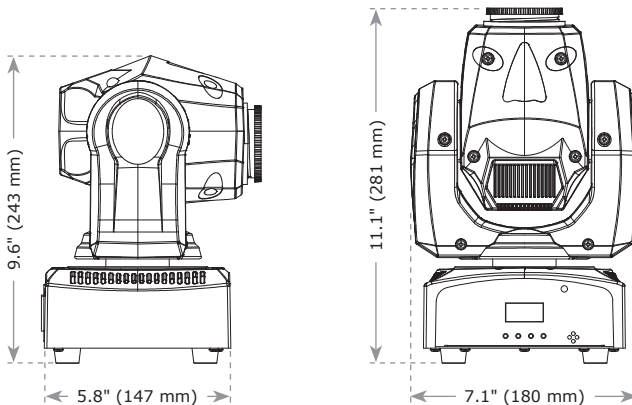



**Enjoy your product!  
Our sincerest thanks for your purchase!  
--The team @ Blizzard Lighting**